

HOW MUCH DANCE FLOOR DO YOU NEED?*

* Assume that only one-third of your guests will dance, so the number of dancers shown in these graphs is only 33% of your total guests.

STARLIGHT and CAM-LAM Dance Floor Panels

4 ft. x 4 ft. (122cm x 122cm)

FLOOR SIZE	NUMBER OF PANELS	NUMBER OF DANCERS	NUMBER OF CADDIES
8'x 8' (244cm x 244cm)	4	16	1
8'x12' (244cm x 366cm)	6	24	1
8'x16' (244cm x 488cm)	8	32	1
12'x16' (366cm x 488cm)	12	48	1
12'x20' (366cm x 610cm)	15	60	1
16'x16' (488cm x 488cm)	16	64	1
16'x20' (488cm x 610cm)	20	80	1
16'x24' (488cm x 732cm)	24	96	1
16'x28' (488cm x 853cm)	28	112	2
16'x32' (488cm x 975cm)	32	128	2
20'x20' (610cm x 610cm)	25	100	1
20'x24' (610cm x 732cm)	30	120	2
20'x28' (610cm x 853cm)	35	140	2
20'x32' (610cm x 975cm)	40	160	2
24'x32' (732cm x 975cm)	48	192	2
24'x36' (732cm x 1097cm)	54	216	3
28'x32' (853cm x 975cm)	56	224	3
32'x32' (975cm x 975cm)	64	256	3
32'x36' (975cm x 1097cm)	72	288	3
36'x36' (1097cm x 1097cm)	81	324	4
36'x40' (1097cm x 1219cm)	90	360	4
40'x40' (1219cm x 1219cm)	100	400	4

ORIGINAL and CAM-LOCK Dance Floor Panels

3 ft. x 3 ft. (91cm x 91cm)

FLOOR SIZE	NUMBER OF PANELS	NUMBER OF DANCERS	NUMBER OF CADDIES
6'x9' (183cm X 274cm)	6	12	1
9'x9' (274cm x 274cm)	9	18	1
9'x12' (274cm x 366cm)	12	24	1
9'x15' (274cm x 457cm)	15	30	1
12'x12' (366cm x 366cm)	16	32	1
12'x15' (366cm x 457cm)	20	40	1
12'x21' (366cm x 640cm)	28	56	2
15'x18' (457cm x 549cm)	30	60	2
15'x21' (457cm x 640cm)	35	70	2
15'x24' (457cm x 732cm)	40	80	2
15'x27' (457cm x 823cm)	45	90	2
18'x24' (549cm x 732cm)	48	96	2
18'x27' (549cm x 823cm)	54	108	3
18'x30' (549cm x 914cm)	60	120	3
21'x27' (640cm x 823cm)	63	126	3
21'x30' (640cm x 914cm)	70	140	3
21'x33' (640cm x 1006cm)	77	154	4
27'x27' (823cm x 823cm)	81	162	4
24'x33' (732cm x 1006cm)	88	176	4
30'x30' (914cm x 914cm)	100	200	4
30'x33' (914cm x 1006cm)	110	220	5
30'x36' (914cm x 1097cm)	120	240	5

Contact your SICO sales representative to discuss your specific dance floor needs.